



# Gate Post Insert Installation Instructions

Step 1) Cut the 2 x 4 to the same length as the steel insert. Align the 2 x 4 with the diamond centers and attach with stainless steel screws. (Fig. 1)

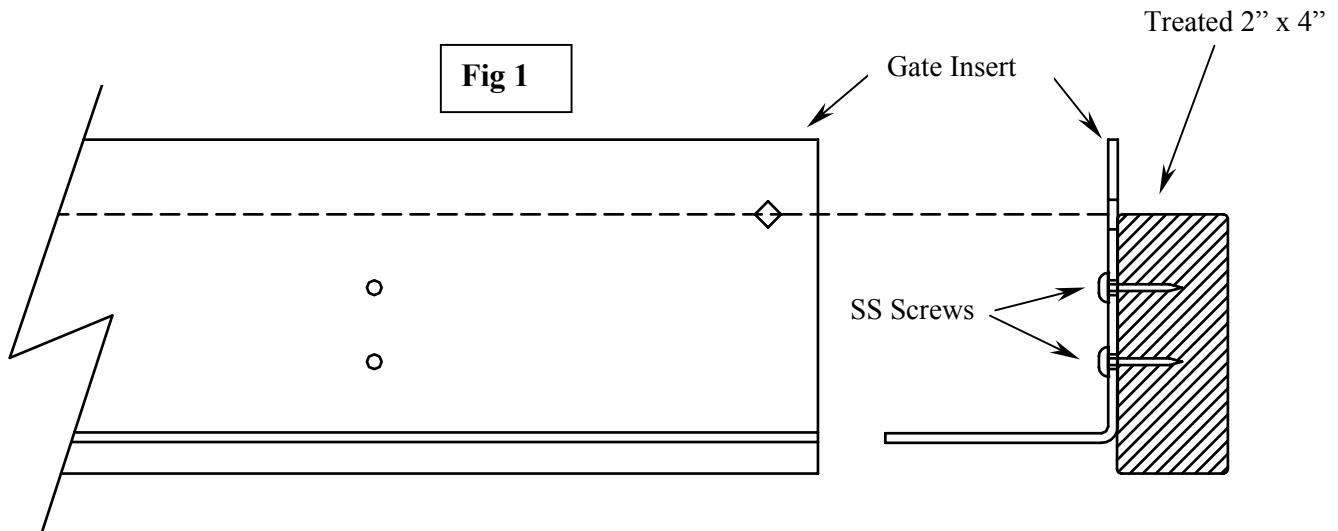

Step 2) Insert the assembly into the post on the hinge side as shown in Fig. 2. Leave 2" from the insert to the top of the post for cap clearance.

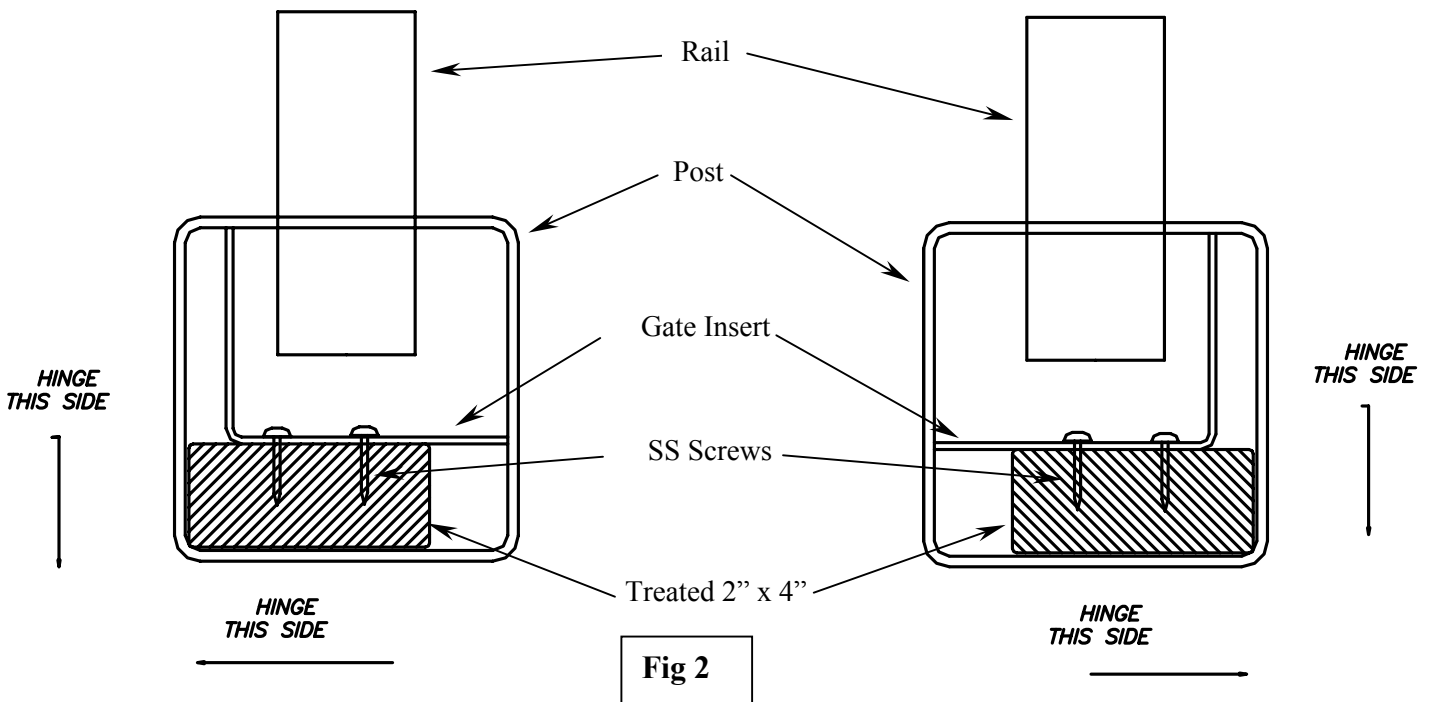

**Care and Cleaning** —Ordinary dirt and mud usually washes off with a hose. At times it may be necessary to use a non-abrasive household cleaner to remove residue and then rinse with a hose.

Royal Crown Limited  
PO Box 360  
Milford, IN 46542-0360  
Phone 800-365-3625  
Fax 574-658-3147

1/06/05

1-IN?